


Mounting base (ROOF CURB) for ROOF TOP ACTIVA units 045-090

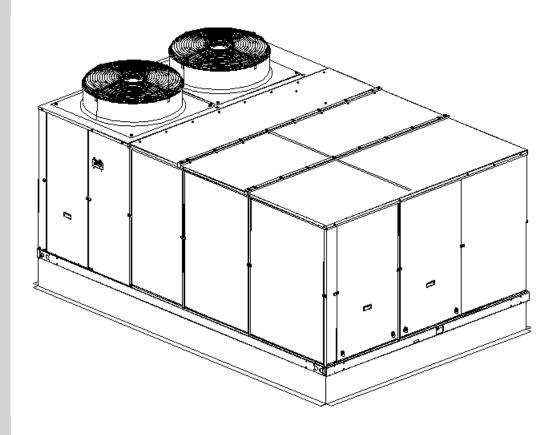

Options and Accessories, Installation manual

Ref.: N-40327 EN 0809







Index

1	Mounting base (ROOF CURB) for ROOF TOP ACTIVA units 045-090	1
1.1	Fixed ROOF CURB mounting	2
1.2	Adjustable ROOF CURB mounting	4
1.3	On-site mounting (all models)	6
1.4	General Information	6
1.5	Installation	7


i

Mounting base (ROOF CURB) for ROOF TOP ACTIVA units 045-090




1.1 Fixed ROOF CURB mounting

Exploded view

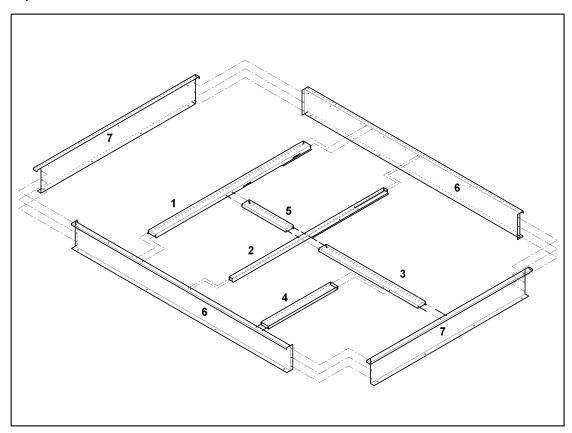


General measurements ACTIVA 045-060

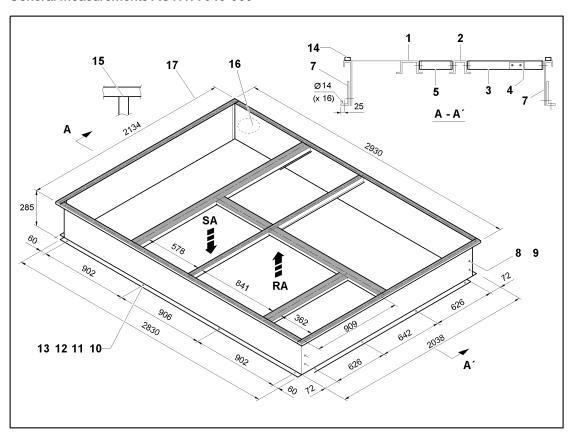



General measurements ACTIVA 075-090

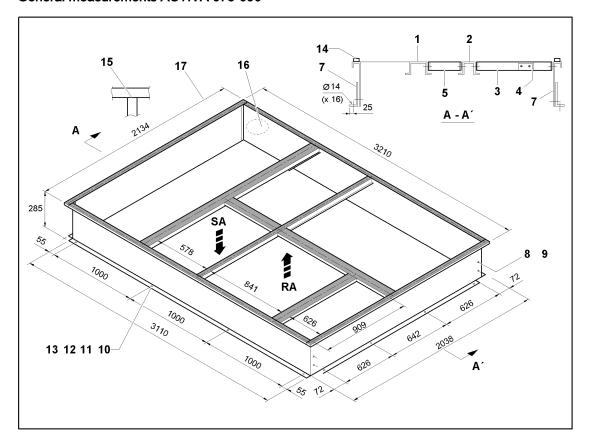


- 1. Condenser rail
- 2. Evaporator rail
- 3. Central rail
- 4. Transverse rail
- 5. Supply rail
- 6. Front/rear side
- 7. Side
- 8. M8 bolt (frame assembly)
- 9. Flat washer (frame assembly)
- 10. M12 bolt

- 11. M12 nut
- 12. Flat washer
- 13. Toothed washer (roof-fastening)
- 14. Rubber strip (located in shaded area)
- 15. Flush connection between rubber strips
- 16. Cable passing area to electrical box
- 17. Outside coil side
- SA Supply air
- RA Return air




1.2 Adjustable ROOF CURB mounting

Exploded view

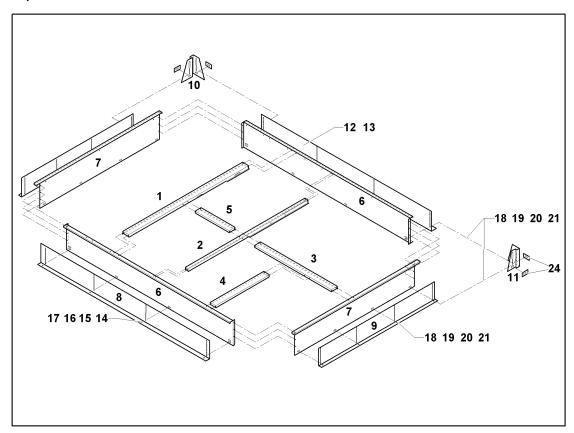


General measurements ACTIVA 045-060

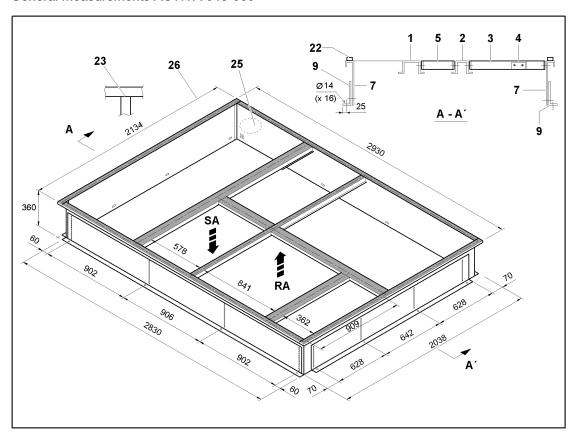



General measurements ACTIVA 075-090

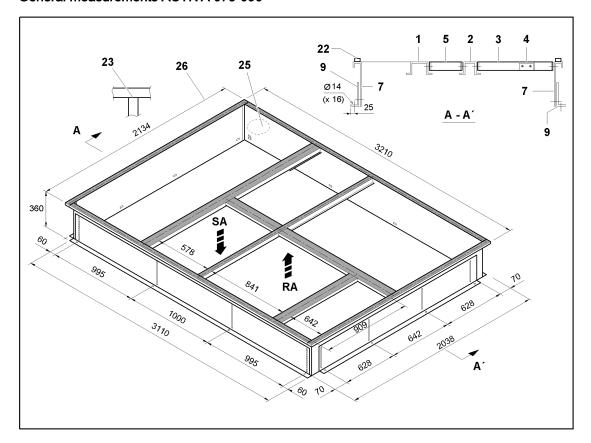


- 1. Condenser rail
- 2. Evaporator rail
- 3. Central rail
- 4. Transverse rail
- 5. Supply rail
- 6. Front/rear side
- 7. Side
- 8. Moving front/rear side
- 9. Moving side
- 10. Left-hand bracket
- 11. Right-hand bracket
- 12. M8 bolt (frame assembly)
- 13. Flat washer (frame assembly)
- 14. M12 bolt

- 15. M12 nut
- 16. Flat washer
- 17. Toothed washer (roof-fastening)
- 18. M10 bolt
- 19. M10 nut
- 20. Flat washer
- 21. Toothed washer (slope fastening/adjustment)
- 22. Rubber strip (located in shaded area)
- 23. Flush connection between rubber strips
- 24. Plate
- 25. Cable passing area to electrical box
- 26. Outside coil side
- SA Supply air
- RA Return air



1.3 On-site mounting (all models)

1.3 On-site mounting (all models)

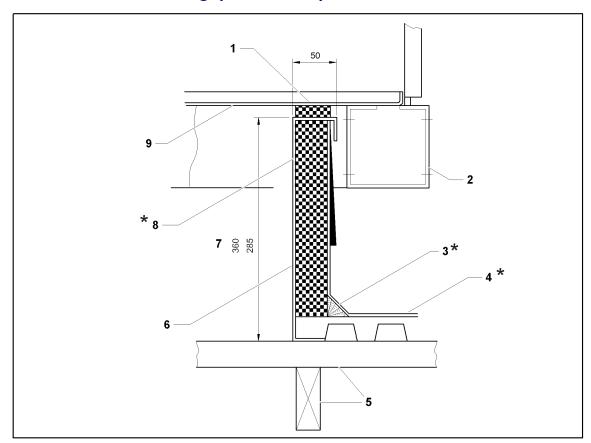

- 1. 40 x 25 mm rubber strip for base frame and all duct supporting surfaces
- 2. Unit base joists
- 3. Bevel batten (*)
- 4. Building roof insulating material (*)
- 5. Building structure and roof
- (*) Material not supplied with the Kit.

- 6. Mounting base frame
- 7. Fixed/adjustable ROOF CURB
- 8. Rigid insulating material (*)
- 9. Unit base

1.4 General Information

The ROOF CURB mounting base accessory is a prefabricated structure that is installed on the roof of the building during construction for the subsequent fitting of the ROOF TOP unit.

Its aim is to ensure the installation as a whole is sealed tight against the roof of the building and provides for easier installation of the ROOF TOP unit.

Ducts can be easily fitted to the mounting base prior to installation of the ROOF TOP unit. All electrical connections can be made directly through the mounting base from the inside of the building.

There are two types of mounting base:

- 1 ROOF CURB fixed type, for flat and levelled building roofs.
- 2 ROOF CURB adjustable type, for sloping building roofs (maximum 7°).

Installation

1.5 Installation

The bases are delivered dismantled in kit form and include the necessary nuts and bolts and rubber strips. They must be secured to the roof of the building. To do so, use the nuts and bolts supplied (M-12) or use welding.

A level tolerance of a maximum of 10 mm in any direction must be maintained.

To avoid humidity and condensate leaks in the building, the four exterior sides must be insulated using rigid insulating material and the contour must be covered with an extension of the same insulating and sealing material used on the building roof (components marked "*" are not supplied with the accessory).

The joints between the ends of the rubber strips must be flush, with no space between them.

The measurements of each model and the instructions for its on-site installation are given in detail in the attached diagrams.

The ducts must be directly connected on the ROOF CURB before fitting the ROOF TOP unit. A plenum system (not supplied) can be used, fitted from the outside (roof) to connect the duct from the inside of the building.

Data and measurements subject to changes without prior notice.